

Firmware Ver. 1.03 New Feature Guide

DJ Effector

RMX-IGNITE

alphatheta.com/support/

For FAQ and other support information for this product, visit the website above.



Before you start

This manual describes a new feature added from the firmware ver. 1.03. In addition to this manual, please also read the Instruction Manual of this product and other relevant manuals.

New Feature

- ✓ A new Utility setting item to indicate current ECHO TIME knob setting on the main screen.

Changing the display of ECHO TIME knob setting

1 Press and hold the [BROWSE/UTILITY] button.

The [UTILITY] screen appears.

2 Turn the multi encoder to select [PHASE/ECHO INFO], then press the multi encoder.

3 Change the setting.

Setting values : PHASE*, ECHO, BOTH

* Factory setting

- Press the [BACK] button to cancel the setting.

4 Press the [BROWSE/UTILITY] button.

The [UTILITY] screen closes and the setting will be reflected in upper side of the main screen.

Troubleshooting

If you think something is wrong with the unit, check the information below and go to the **[FAQ]** for **[RMX-IGNITE]** on the AlphaTheta support website.

alphatheta.com/support/

◆ **Can't see the phase meter of the multi player the unit syncs with.**

- Change the **[PAHSE/ECHO INFO]** to **[PHASE]** or **[BOTH]** in the Utility settings.
When **[ECHO]** is set, the main screen shows only the player number of the multi player with which this unit syncs.

◆ **Can't see the ECHO TIME knob setting status on the main screen.**

- Change the **[PAHSE/ECHO INFO]** to **[ECHO]** or **[BOTH]** in the Utility settings.
When **[PHASE]** is set, the main screen doesn't show the **[ECHO TIME]** knob setting status.

©2026 AlphaTheta Corporation

All rights reserved.