



DJ Effector


RMX-IGNITE

Firmware Update Guide

A. How to check the current Firmware Version of RMX-IGNITE

Press and hold the BROWSE button to open the UTILITY screen.

Turn the multi-encoder to the right and scroll until the version display appears. It will show Ver. x.xx.

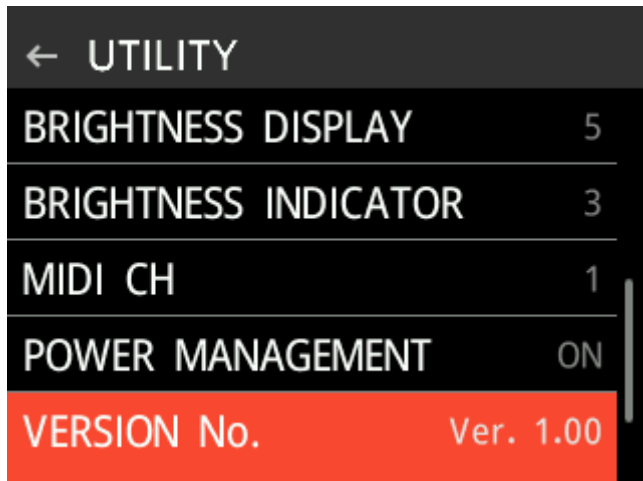

B. Download and unzip the update file

1. Unzip the downloaded file.

For Windows:

Save the downloaded file [RMX-IGNITE_Verxxx_Win.zip] to an arbitrary folder such as desk top and unzip it.

For Mac OS:

Save the downloaded file [RMX-IGNITE _Verxxx_Mac.zip] to an arbitrary folder such as desk top and unzip it.

The [RMX-IGNITE _Verxxx_Mac.dmg] file is generated when the file is unzipped and then double click it to mount.

2. Check the unzipped file.

For Windows:

The [RMX-IGNITE _Verxxx_Win] folder is generated when the file is unzipped.

Please ensure the following files are included in the folder.

1. [RMX-IGNITE_xxx.upd]
2. [RMX-IGNITEUpdate.exe]
3. pcupdate.dll

For Mac OS:

The [RMX-IGNITE _Verxxx_Mac] folder is generated when the file is extracted.

Please ensure the following file is included in the folder.

1. [RMX-IGNITEUpdate_vxxx.app]

- ✓ **xxx is numerical characters of the new firmware version.**
- ✓ Depending on your computer settings, the extension such as .exe or .app may not be displayed.

C. Preparation for updating RMX-IGNITE

1. Connect RMX-IGNITE and a computer.

Connect RMX-IGNITE to your computer using a USB cable.

(Connect the USB cable to (USB for MULTI I/O) port.)

2. Activate the update mode.

Press the power button while pressing the [AUTO] button and the [TAP] buttons.

After the power is on, keep pressing the [AUTO] button and the [TAP] button for about 3 seconds.



D. Updating the firmware using a computer

1. Updating procedures

Before updating, close all the applications running on the computer.

<STEP1> Activate the update program.

For Windows:


Double click [RMX-IGNITEUpdate.exe] to activate the update file.

For Mac OS:

Double click [RMX-IGNITEUpdate_vxxx.app] to activate the update file.

<STEP2> Select a language.

Select the language you want to use and click on [OK].

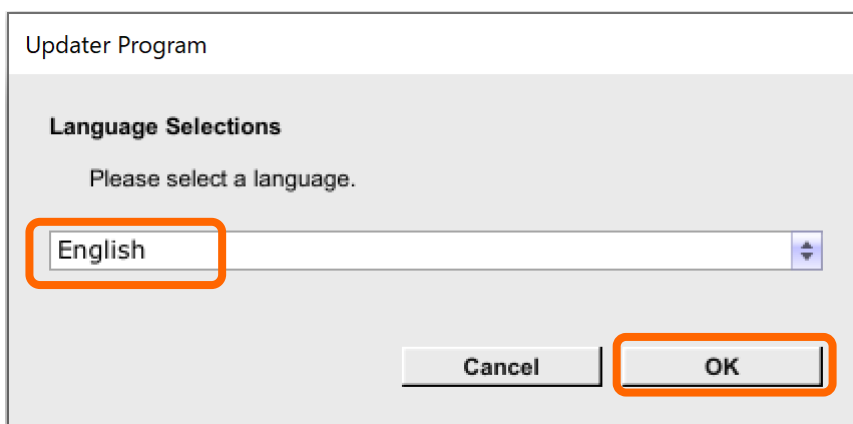

• Please refer to “Tips: When [Your RMX-IGNITE is not recognized] is shown during updating the firmware” in a later section if the same message is popped up after clicking “OK”.

<STEP3> Check the firmware version before updating.

After ensuring that the firmware version is **x.xx**, click on the [Start] button.


Ensure that the power cable and the USB cable are securely connected to RMX-IGNITE during the update.

Please make sure to use an AC adaptor to power your laptop during updating the firmware.



The updating process starts.


Please wait until the progress bar reaches to the right end.

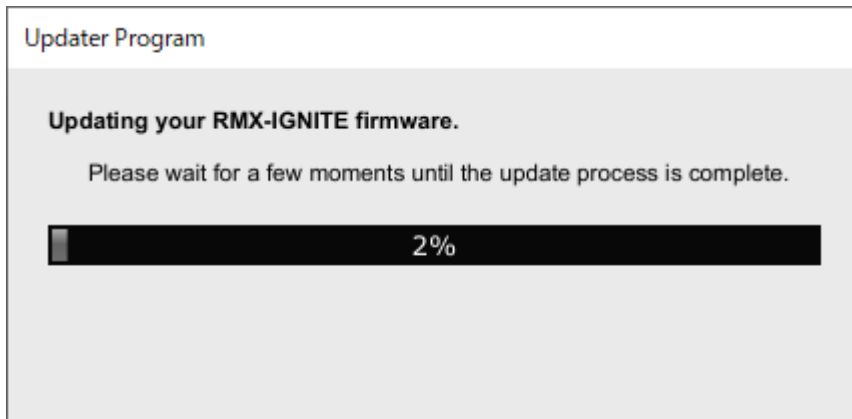

<STEP4> Complete the updating process.

When the firmware update process is complete and the message below appears, click the [OK] button.

When COMPLETE is displayed on the RMX-IGNITE's LCD screen, the update is complete.

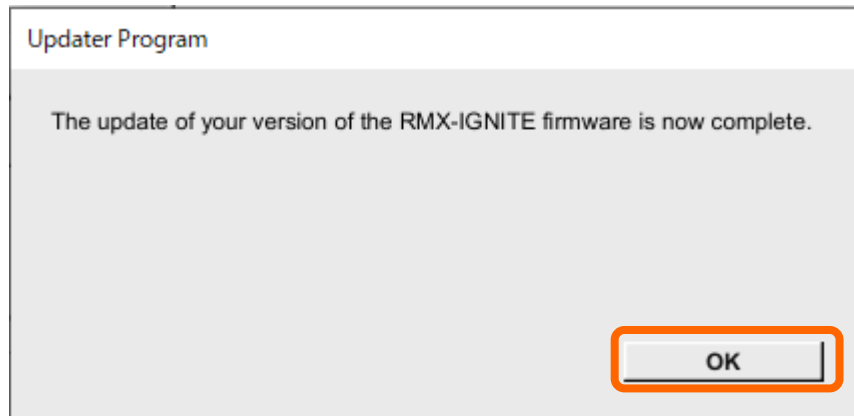

<STEP5> Reboot RMX-IGNITE.

Turn off the power of RMX-IGNITE and then turn it on again.


E. Check the firmware version

Check the firmware version of RMX-IGNITE as described in [A. How to check the current Firmware Version of RMX-IGNITE].

The firmware update is successfully completed when you find the version you wanted in the Settings Utility.


Tips: How to cope with abnormal termination:

If you fail to update and the following message appears, turn off the power of RMX-IGNITE and start from the beginning of the above Updating Procedures.

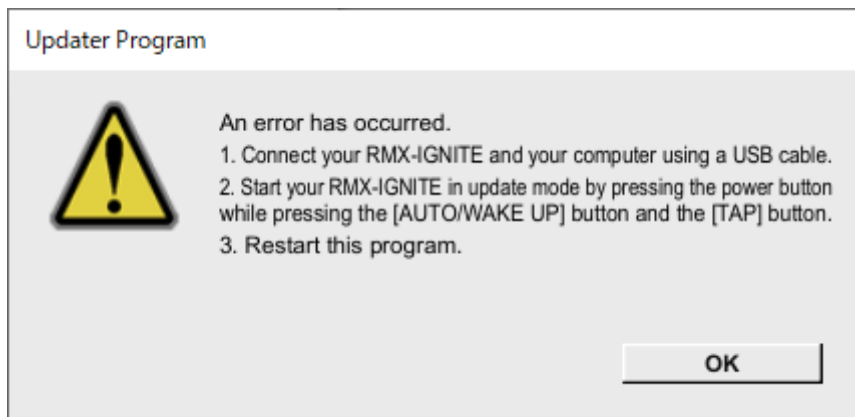

Tips: When [Your RMX-IGNITE is not recognized] is shown during updating the firmware

When the following message appears after selecting a language, check the following tips.

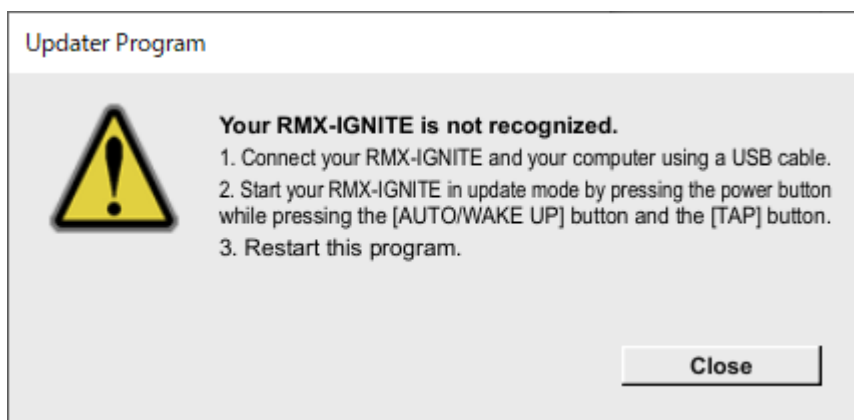

- Is the USB cable connected to a USB for MULTI I/O port?

If it is not connected, connect the cable to a MULTI I/O port and start the updating steps from the beginning again.

[Reference information]

This updater has been verified to operate on the operating systems below:

Windows: Windows 10/Windows 11

Mac: macOS Ventura 13 / macOS Sonoma 14 / macOS Sequoia 15 / macOS Tahoe 26

Approximately 6 minutes is required for updating.

The images shown in this Guide may not be the same as the current ones.