

 AlphaTheta

MULTI PLAYER

CDJ-3000X

Firmware Update Guide

How to check the version

- 1 Turn on the power of the CDJ-3000X.
- 2 Press and hold the [MENU] button to open the [UTILITY] screen.
- 3 The version No. appears in the upper right corner of the [UTILITY] screen.


Preparation for update

- 1 Unzip the .zip file on your computer.

Unzip the downloaded [CDJ3000Xv***.zip] file to find the following update file.
Please make sure the unzipped update file is CDJ3000Xv***.UPD.

CDJ3000Xv***.UPD

- 2 Copy the unzipped update file to the root directory of a USB storage device.

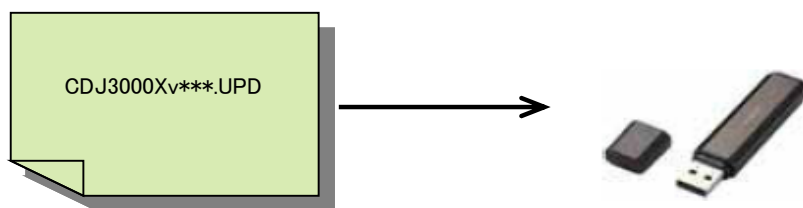

- * DO NOT rename the file name.
- * Please use a USB storage device (USB Mass Storage Class-compliant) formatted in FAT, FAT32 or exFAT.

How to update

1 Enter the update mode:

Ensure that the CDJ-3000X is powered off and no USB storage device and USB cable is connected. Then, turn on the power while pressing both the [IN/CUE] and [RELOOP/EXIT] buttons simultaneously.

Release your fingers from the buttons after "Connect USB storage device into top USB1 port." is displayed.

2 Insert the USB storage device containing the copied update file into the USB port.

* When using a USB Type-A storage device, insert it into the USB 1 Type-A port.
When using a USB Type-C storage device, insert it into the USB 2 Type-C port.



How to update (Continued)

- 3 The update starts automatically and the progress bar is displayed.

At the same time, the current version and the version after the update are displayed.

* DO NOT remove the USB storage device or turn off the power during the update.

When the update is finished, the below complete message is displayed:

"Firmware update is complete. Turn the power off/on before using."

- 4 When the complete message is displayed, turn the power off.

Follow "How to check the version" to check the firmware version to make sure that the firmware has been updated. Then disconnect the USB storage device.

If the update process does not start or "MAIN update file is corrupt." is displayed, the downloaded file might be corrupted.

In that case, start over the update process again from downloading the update file.

If the update process still fails even after that, please try another USB storage device because the USB device could cause the failure.

If the progress bar does not advance or an error message such as "MAIN firmware update failed" is displayed, please contact the Customer Support.

alphatheta.com/support/

Network Update

When connected to the internet, the CDJ-3000X can download the latest firmware and install it directly on the unit. (Firmware version 1.40 or later is required.)

Update notification badge appears when network updates are available

When the CDJ-3000X is connected to the internet, the following notifications appear if the latest firmware is available.


- An update notification badge appears in the [Info] section of the [UTILITY] screen.
- "New Firmware (x.xx) Available" appears to the right of [Version No.].

Instructions for Network Update


An update notification badge appears when the latest firmware is available. If the badge appears, follow the steps below to perform the update.

1 Launch the Network Update

Touch [Info] on the [UTILITY] screen. [Version No.] is displayed.
"New Firmware (x.xx) Available" appears on the right side of the screen.
Touch "New Firmware (x.xx) Available."

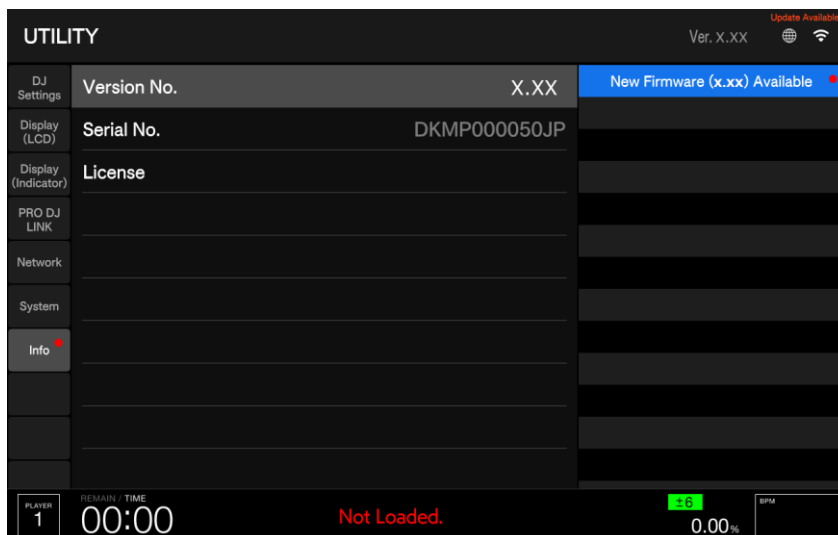

- #### 2 When the following caution appears, select OK.
- "Network Update available. Press OK to start."

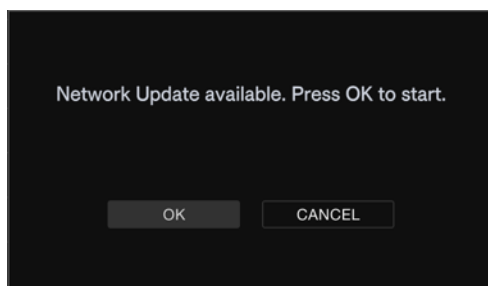

Instructions for Network Update (Continued)

- 3 The player will automatically reboot and start the update.
- 4 During the update, the progress status is displayed with a progress bar.
At the same time, the current version and the version after the update are displayed.

Note: Do not change the network environment or turn off the power during the update.

When the update is finished, the complete message below is displayed:
"Firmware update is complete. Turn the power off/on before using."

- 5 When the complete message is displayed, turn the power off.
After the update is complete, follow "How to check the version"
to confirm that the firmware has been updated correctly.

If the progress bar does not advance or an error message such as "MAIN firmware update failed" is displayed, please contact the Customer Support.

alphatheta.com/support/