

OPUS-QUAD

Hardware Diagram for Serato DJ Pro



GROUP	No.	NAME	FUNCTION	+SHIFT	GROUP	No.	NAME	FUNCTION	+SHIFT	
1, DECK * 機能は左右デッキ共通です。					2, EFFECT					
1	JOG	天面 側面	スクラッチ (Vinyl On) ビッチバンド (Vinyl Off)	Search(Platter Skip)	3, MIXER					
2	TEMPO		Adjust Tempo	Tempo Ignore	1	CROSS FADER	クロスフェーダー(Serato Video only)	クロスフェーダースタート		
3	TEMPO RESET		テンポリセット		2	CH FADER	チャンネルフェーダー(Serato Video only)	チャンネルフェーダースタート		
4	TEMPO RANGE		Tempo Range Increase	Tempo Range Decrease	3	CH CUE(Headphone)	ヘッドホンモニター On/Off	Deck Tap Tempo		
5	MASTER TEMPO		Keylock On/Off		4	EQ HIGH	High EQ (EQ Colored Waveforms only)			
6	KEY SYNC		Key Sync On	Key Sync Off	5	EQ MID	Mid EQ (EQ Colored Waveforms only)			
7	JOG ADJUST		JOG ADJUST		6	EQ LOW	Low EQ (EQ Colored Waveforms only)			
8	SYNC		Tempo Sync / Resync	Tempo Sync OFF	4, BROWSER					
9	MASTER		Sync OFF		1	スマートローラーセレクター	回す	Library Scroll	Fast Library Scroll	
10	JOG MODE		Vinyl On/Off				押す	Library Forward		
11	VINYL SPEED ADJUST		Vinyl Speed Adjust				上側に倒す			
12	DECK SELECT		DECK切替				下側に倒す			
13	TRACK SEARCH		Prev. / Next Track				左側に倒す			
14	DECK QUANTIZE		Quantize (Global)		右側に倒す					
15	HOT CUE A		HOT CUE1設定/再生	Delete HOT CUE1	2	BACK	Library Back			
16	HOT CUE B		HOT CUE2設定/再生	Delete HOT CUE2	3	TAG TRACK/REMOVE	Load to Prepare			
17	HOT CUE C		HOT CUE3設定/再生	Delete HOT CUE3	4	LOAD	Load a track			
18	HOT CUE D		HOT CUE4設定/再生	Delete HOT CUE4	4	2回押し	Instant Doubles			
19	HOT CUE E		HOT CUE5設定/再生	Delete HOT CUE5			Needle Drop			
20	HOT CUE F		HOT CUE6設定/再生	Delete HOT CUE6						
21	HOT CUE G		HOT CUE7設定/再生	Delete HOT CUE7						
22	HOT CUE H		HOT CUE8設定/再生	Delete HOT CUE8						
23	SHIFT		Shift							
24	BEAT LOOP	回す	Loop Size Select							
		押し	Loop Size Select (Half/Double)							
		押し	Active Loop Toggle	Reloop						
25	LOOP IN		Loop in	Loop in adjust						
26	LOOP OUT		Loop out	Loop out adjust						
27	BEAT JUMP		Beat Jump Fwd/Back	Beat Jump Value select						
28	SLIP REVERSE		Censor	Reverse						
29	CUE		Cue設定/再生, BackCue							
30	PLAY/PAUSE		再生一時停止	Stutter Play						