

XDJ-RX3

Hardware Diagram for Serato DJ Pro



GROUP	No.	NAME	FUNCTION	+SHIFT	
1, DECK * All the functions assigned on the right deck are the same as those on the left deck shown below.					
1	1	platter	Scratch (Vinyl On)	Search (Skip Mode)	
		wheel side	Pitch bend (Vinyl Off)		
	2	TEMPO	Tempo control		
	3	MASTER TEMPO	Keylock On/Off		
	4	TEMPO RANGE	Tempo Range		
	5	SYNC	Sync On		
	6	MASTER	Sync Off		
	7	JOG MODE	Vinyl On/Off		
	8	VINYL SPEED ADJUST ON / OFF	Vinyl speed adjust On/Off		
	9	VINYL SPEED ADJUST (GUI / SHORT CUT)	Adjust braking speed		
	10	JOG ADJUST	JOG ADJUST		
	11	TRACK SEARCH	PREV / NEXT TRACK		
	12	SEARCH	Fast Forward / Rewind		
	13	REVERSE	Reverse	Censor	
	14	SLIP	SLIP mode On/Off		
	15	SHIFT	Shift		
	16	LOOP IN	Loop in / Loop in adjust / 4 Beat Autoloop Enable		
	17	LOOP OUT	Loop out / Loop out adjust		
	18	RELOOP / EXIT	Reloop / Exit		
	19	CALL NEXT / 2X		Loop slot select next	
			<i>During loop playback</i>	Loop Size Select (Double)	
	20	CALL PREV / 1/2X		Loop slot select previous	
			<i>During loop playback</i>	Loop Size Select (Half)	
	21	DELETE	Loop Slot Delete		
	22	MEMORY	Loop Slot Lock		
	23	PLAY / PAUSE	Play / Pause	Stutter Play	
	24	CUE	Set / Play cue, Back cue		
24	LOAD		Load a track		
		<i>Press twice</i>	INSTANT DOUBLES		
25	NEEDLE SEARCH (GUI / Overall waveform display)	NEEDLE SEARCH			
26	TIME MODE / AUTO CUE (GUI / Time display)	TIME MODE (REMAINING / ELAPSED TIME)			
27	QUANTIZE	Quantize On/Off			
2, EFFECT					
3, MIXER					
3	1	CROSSFADER	Cross Fader	Cross Fader Start	
	2	CH FADER	Channel Fader	Channel Fader Start	
	3	CUE (Headphone)	Headphone monitor On/Off	TAP BPM	
4, BROWSER					
4	1	rotate	Library Scroll	Fast Library Scroll	
		press	Jump between panels (forward)		
	2	BACK	Jump between panels		
3	TAG TRACK / REMOVE	Add track to Prepare			

GROUP	No.	NAME	FUNCTION	+SHIFT
5, PERFORMANCE PADS				
5	1	HOT CUE	HOT CUE	SAVED FLIP
	2	BEAT LOOP	AUTO LOOP / BEAT JUMP	SLICER
	3	SLIP LOOP	LOOP ROLL / BEAT JUMP	SLICER LOOP
	4	BEAT JUMP	SAMPLER	PITCH PLAY
5	PERFORMANCE PAD A		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP	Trigger Auto Loop	
		LOOP ROLL	Trigger Loop Roll	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
6	PERFORMANCE PAD B		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP	Trigger Auto Loop	
		LOOP ROLL	Trigger Loop Roll	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
7	PERFORMANCE PAD C		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP	Trigger Auto Loop	
		LOOP ROLL	Trigger Loop Roll	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
8	PERFORMANCE PAD D		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP	Trigger Auto Loop	
		LOOP ROLL	Trigger Loop Roll	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
9	PERFORMANCE PAD E		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP / BEAT JUMP	Trigger Auto Loop / Beat Jump Rev	
		LOOP ROLL / BEAT JUMP	Trigger Loop Roll / Beat Jump Rev	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
10	PERFORMANCE PAD F		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP / BEAT JUMP	Trigger Auto Loop / Beat Jump Size Select	
		LOOP ROLL / BEAT JUMP	Trigger Loop Roll / Beat Jump Size Select	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
11	PERFORMANCE PAD G		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP / BEAT JUMP	Trigger Auto Loop / Beat Jump Size Select	
		LOOP ROLL / BEAT JUMP	Trigger Loop Roll / Beat Jump Size Select	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	
12	PERFORMANCE PAD H		<i>mode</i>	
		HOT CUE	Set / call Hot Cue	Delete HOT CUE
		AUTO LOOP / BEAT JUMP	Trigger Auto Loop / Beat Jump Fwd	
		LOOP ROLL / BEAT JUMP	Trigger Loop Roll / Beat Jump Fwd	
		SAMPLER	Sampler slot play	Sampler slot stop / load
		SAVED FLIP	Start Flip / Retrigger Flip	Flip On/Off
		SLICER	Slicer section play	
		SLICER LOOP	Slicer section play	