


DDJ-GRV6

Hardware Diagram for djay for iOS, djay Pro for Mac/Windows

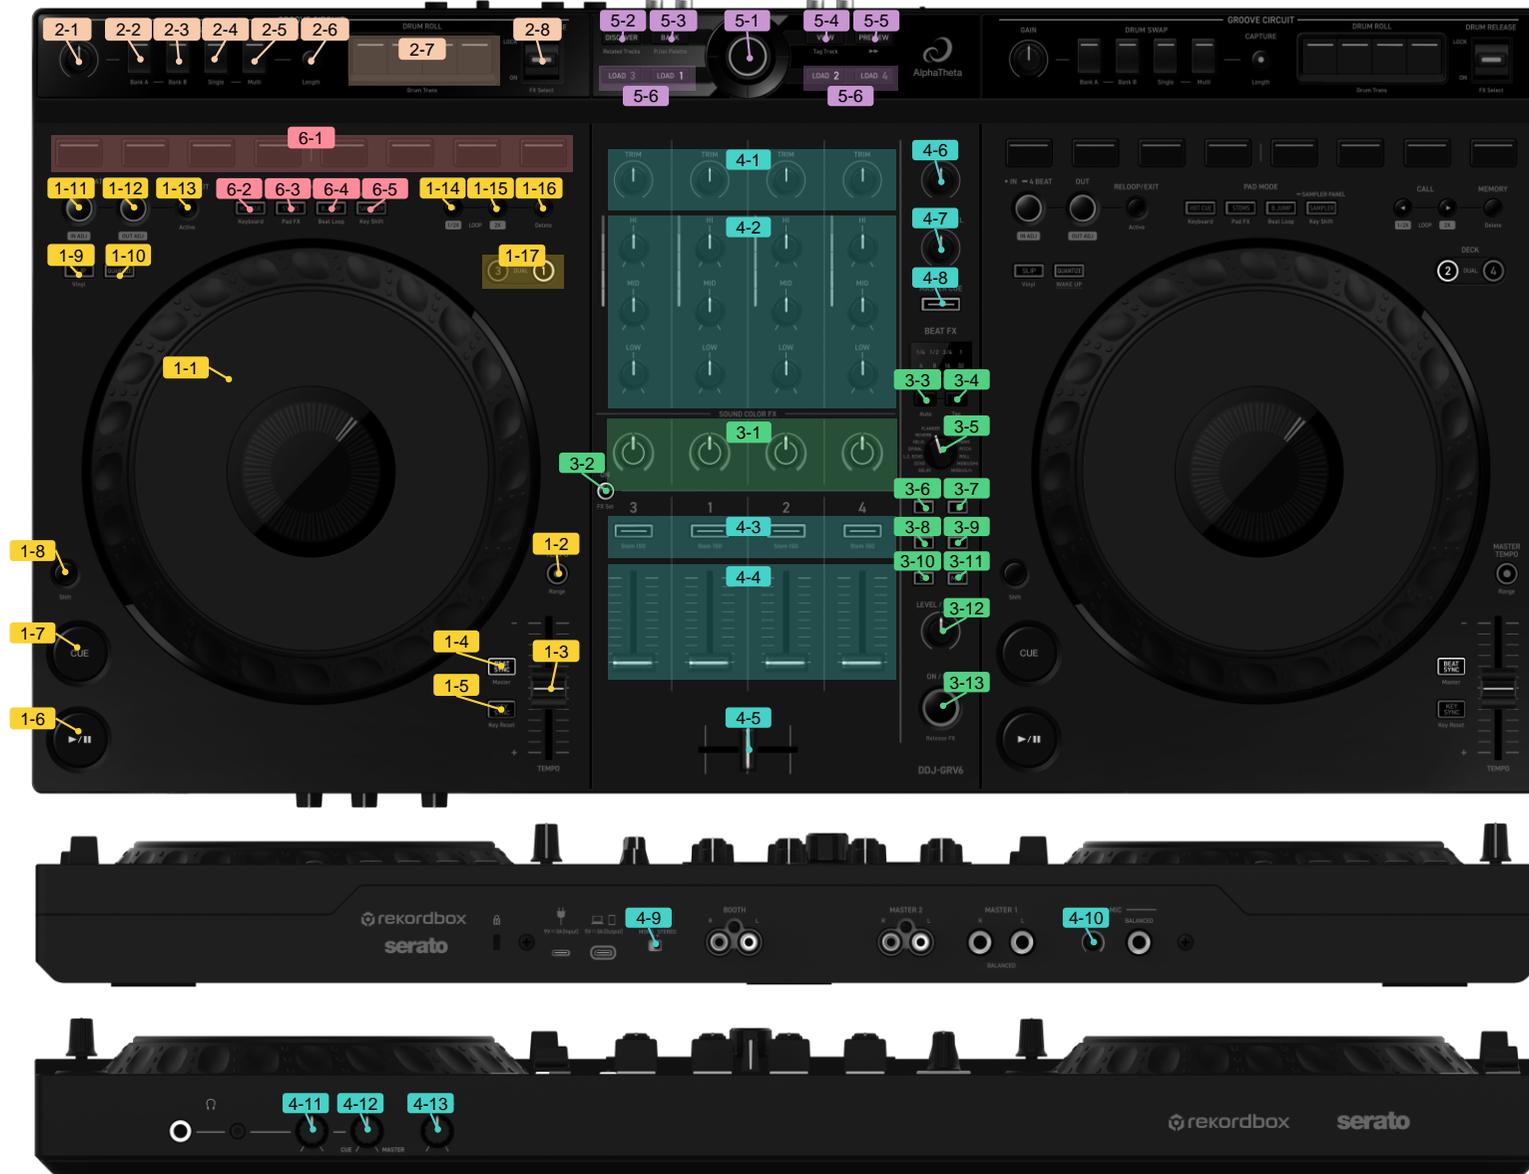

Group	No.	Name	Function	+SHIFT	
1.DECK * Functions are the same for both left and right decks.					
	1	JOG	Platter	Scratch (Vinyl mode on) Pitch bend (Vinyl mode off)	Search
			Wheel side	Pitch bend	—
	2	MASTER TEMPO	Key Lock on/off	Tempo range	—
	3	TEMPO	Tempo control	—	—
	4	BEAT SYNC	Sync on/off	Set sync master	—
	5	KEY SYNC	Match key	Key on/off	—
	6	PLAY/PAUSE	Play/Pause	—	—
	7	CUE	Set/Call cue, Back cue	Jump to track start	—
	8	Shift	Shift	—	—
	9	SLIP	Slip mode on/off	Vinyl mode on/off	—
	10	QUANTIZE *1	Quantize on/off	—	—
	11	LOOP IN / 4 BEAT	Loop off	Loop in	—
			Loop on	Loop half	Loop in adjustment
			Long press	4 Beat Loop on	—
	12	LOOP OUT	Loop off	Loop out	—
			Loop on	Loop double	Loop out adjustment
			Loop off	Reloop	—
	13	RELOOP / EXIT	Loop on	Loop exit	—
			—	—	—
	14	CUE/LOOP CALL ◀	—	Loop half	—
	15	CUE/LOOP CALL ▶	—	Loop double	—
	16	MEMORY	—	—	—
	17	DECK 1-4	Deck select Dual Deck mode *2	—	—
2.GROOVE CIRCUIT (STEMS FX)					
	1	GAIN (LEVEL/DEPTH)	Level/Depth for Stem FX	—	—
	2	DRUM SWAP 1 (VOCAL)	Vocal Stem to apply FX and loop roll to	Set FX type to Echo Out	—
	3	DRUM SWAP 2 (MELODY)	Melody Stem to apply FX and loop roll to	Set FX type to Reverb Out	—
	4	DRUM SWAP 3 (BASS)	Bass Stem to apply FX and loop roll to	Set FX type to Vynal Brake	—
	5	DRUM SWAP 4 (DRUMS)	Drums Stem to apply FX and loop roll to	Set FX type to Delay	—
	6	CAPTURE (1/2 BEAT)	Beat setting for Stem FX	—	—
	7	DRUM ROLL (STEMS ROLL)	Applies 1/8, 1/4, 1/2, 1 beat loop roll to stems	—	—
	8	DRUM RELEASE (FX)	Stem FX on/off	—	—

Group	No.	Name	Function	+SHIFT	
3.EFFECT					
	1	SOUND COLOR FX	Sound Color FX parameter	—	
	2	SOUND COLOR FX ON/OFF	Sound Color FX on/off	FX Select (Filter, Tape Echo, Reverb, Noise)	
	3	BEAT ◀ *3	Select beats for Beat FX	—	
	4	BEAT ▶ *3	Select beats for Beat FX	—	
	5	BEAT FX SELECT	Select Beat FX	—	
	6	BEAT FX CH SELECT 1	Select Beat FX channel (CH1)	—	
	7	BEAT FX CH SELECT 2	Select Beat FX channel (CH2)	—	
	8	BEAT FX CH SELECT 3	Select Beat FX channel (CH3)	—	
	9	BEAT FX CH SELECT 4	Select Beat FX channel (CH4)	—	
	10	BEAT FX CH SELECT SP	—	—	
	11	BEAT FX CH SELECT MST	Select Beat FX channel (MASTER)	—	
	12	LEVEL/DEPTH	Beat FX parameter	—	
	13	BEAT FX ON/OFF	Beat FX on/off	—	
4.MIXER					
	1	TRIM	Trim	—	
	2	EQ (HI, MID, LOW)	EQ mode	EQ (HI, MID, LOW)	—
			Neural Mix mode	Each stem (Vocal, Harmonic, Drums) volume	—
	3	CH CUE	Headphones monitor on/off	Switch EQ mode / Neural Mix mode	
	4	CHANNEL FADER	Channel fader	Channel fader start	
	5	CROSSFADER	Crossfader	Crossfader start	
	6	MASTER LEVEL	Master Level	—	
	7	BOOTH LEVEL	Booth Level	—	
	8	MASTER CUE	Master out monitor on/off	—	
	9	Android MONO/STEREO	—	—	
	10	MIC ATT.	Mic Attenuator	—	
	11	HEADPHONES LEVEL	Monitor level	—	
	12	HEADPHONES MIX	Monitor balance	—	
	13	MIC LEVEL	Mic Level	—	


Group	No.	Name	Function	+SHIFT	
5.BROWSE					
	1	SMART ROTARY SELECTOR	Rotate	Move cursor	Switch section tab
			Tilt forward or backward	Jump cursor	—
			Tilt to the right/left	Select next/previous section	—
			Press	Switch library table	—
	2	DISCOVER	—	—	
	3	BACK	Go back	—	
	4	VIEW	Toggle expanded library	Add/Remove track to/from queue	
	5	PREVIEW	Preview track	Skip forward in preview	
	6	LOAD 1-4	Load track	Add/Remove track to/from queue	
			Press twice	Instant Doubles	—
6.PERFORMANCE PADS					
	1	PAD *4	mode	—	—
			HOT CUE	Set/Call Hot Cue	Delete Hot Cue
			PITCH PLAY	Playback starts from the Hot Cue point, with the sound pitch assigned to that pad	Select Hot Cue point
			STEMS	Mute/Solo Neural Mix channels	—
			INSTANT FX	Activate Instant FX	—
			BEAT JUMP	Move Playback position	—
			AUTO LOOP	Auto Loop on/off	—
			SAMPLER	Playback sampler slot	Stop sampler slot
			BOUNCE LOOP	Bounce Loop on/off	—
			2	HOT CUE	Hot Cue mode
3	STEMS	Stems mode	Instant FX mode		
4	BEAT JUMP	Beat Jump mode	Auto Loop mode		
5	SAMPLER	Sampler mode	Bounce Loop mode		

- *1 Pressing this button while in Off mode (Power Management) will cancel Off mode. This operation is limited to the button of the deck on the right side.
- *2 To enter Dual Deck mode on left deck, press the [DECK 3] button while pressing the [DECK 1] button, or press the [DECK 1] button while pressing the [DECK 3] button. To cancel Dual Deck mode on left deck, press the [DECK 1] button or [DECK 3] button.
- In the right deck, Use the [DECK 2] button and [DECK 4] button to enter Dual Deck mode.
- *3 The parameters changed by the [BEAT ◀] or [BEAT ▶] buttons can be checked by the illuminated values above the buttons.
- When set to 2 beats, [1] and [4] light up
 - When set to more than 32 beats, [32] flashes
 - When set to less than 1/4 beat, [1/4] flashes
 - When the set number of beats is a minus number, the number flashes rapidly
 - When the parameter is in %, no numbers are lit.


*4 The pad assignment for each pad mode is shown as follows.

Hot Cue mode

When the [Shift] button is not pressed.

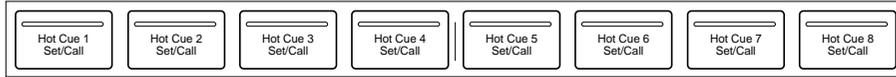


When the [Shift] button is pressed.

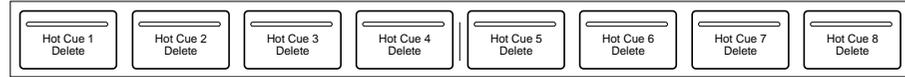


Stems mode

When Drums-Harmonic-Vocals is selected in the Neural Mix settings in djay. The assignments are linked to the Neural Mix settings configuration.

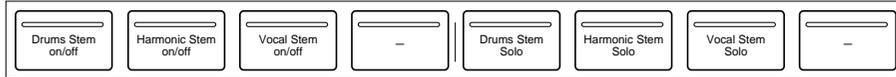


Beat Jump mode

When the [Shift] button is not pressed.

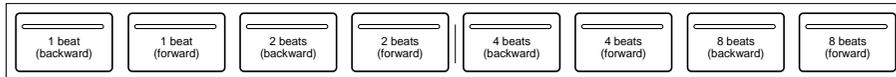


When the [Shift] button is pressed.

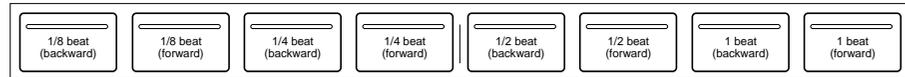


Sampler mode

When the [Shift] button is not pressed.

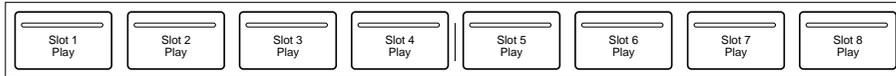


When the [Shift] button is pressed.

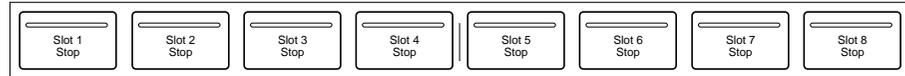


Pitch Play mode


When the [Shift] button is not pressed.

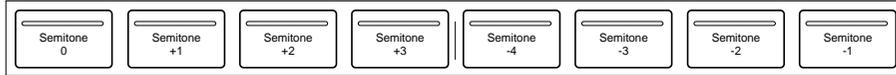

When the [Shift] button is pressed.

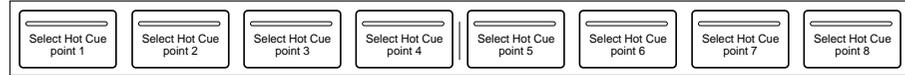


Instant FX mode

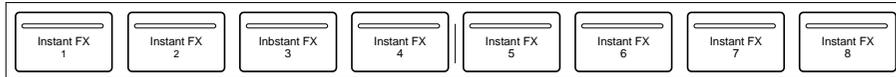


Auto Loop mode

When the [Shift] button is not pressed.

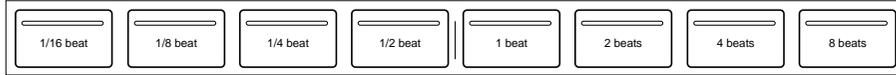

When the [Shift] button is pressed.

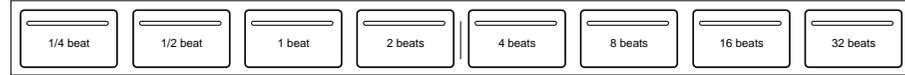

Bounce Loop mode

