

# DDJ-SP1

## Hardware Diagram for Serato DJ Pro



Group	No.	Name	Operation	Serato/Video Control Mode: OFF	Serato/Video Control Mode: ON
Browse	B1	BROWSE	Turn	Move a cursor within the track list. Move a cursor within [Crates] panel. Move a cursor within [Files] panel between same layer.	Move a cursor within the track list. Move a cursor within [Crates] panel. Move a cursor within [Files] panel between same layer.
	B2	BACK	Press	Move a cursor between panels. Move a cursor within [Files] panel to lower layer.	Move a cursor between panels. Move a cursor within [Files] panel to lower layer.
	B3	LOAD PREPARE / LOAD	Long press / Press	Enter the Utilities Mode. Add a track to [Prepare] panel. Load a track.	Enter the Utilities Mode. Add a track to [Prepare] panel. Load a track.
Mixer	M1	DECK 3	Press	Switch Deck 1/3	Switch Deck 1/3
	M2	DECK 4	Press	Switch Deck 2/4	Switch Deck 2/4
	M3	SAMPLER VOL	Move the slider	Adjust Volume of all Sample Slots	Adjust Volume of all Sample Slots
Deck	D1	SYNC	Press	Turn the Sync on	Turn the Sync on
	D2	SLIP	Press	SLIP Mode On/Off	SLIP Mode On/Off
	D3	CENSOR	Press	Play a track backward while the button is pressed (SLIP REVERSE)	Set to Internal Mode Play a track backward while the button is pressed (SLIP REVERSE)
	D4	AUTO LOOP	Turn / Press	Change the Loop length Auto Loop On/Off	Change the Loop length Auto Loop On/Off
Effect	E1-1	FX 1 EFFECT PARAMETER 1	Turn	Adjust Effect 1 Parameter on FX 1	Adjust Video Effect 1 Parameter for left channel
	E2-1	FX 1 EFFECT PARAMETER 2	Turn	Adjust Effect 2 Parameter on FX 1	Adjust Video Effect 2 Parameter for left channel
	E3-1	FX 1 EFFECT PARAMETER 3	Turn	Adjust Effect 3 Parameter on FX 1	Adjust Video Effect 3 Parameter for left channel
	E4-1	FX 1 BEATS	Turn	Adjust Effect Time for FX 1	Adjust Opacity for Image Effect
	E5-1	FX 1 EFFECT PARAMETER 1	Press	Effect 1 on FX 1 On/Off	Select Effect Type for Effect 1 of FX 1
	E6-1	FX 1 EFFECT PARAMETER 2	Press	Effect 2 on FX 1 On/Off	Select Effect Type for Effect 2 of FX 1
	E7-1	FX 1 EFFECT PARAMETER 3	Press	Effect 3 on FX 1 On/Off	Select Effect Type for Effect 3 of FX 1
	E8-1	FX 1 TAP	Press	Switch the Tap Tempo for FX 1 to Manual Tempo Mode / Set BPM for FX 1 by tapping the button	Select Single FX Mode/Multi FX Mode for FX 1
	E9-1	FX 2 EFFECT PARAMETER 1	Turn	Adjust Effect 1 Parameter on FX 2	Adjust Video Effect 1 Parameter for right channel
	E10-1	FX 2 EFFECT PARAMETER 2	Turn	Adjust Effect 2 Parameter on FX 2	Adjust Video Effect 2 Parameter for right channel
	E11-1	FX 2 EFFECT PARAMETER 3	Turn	Adjust Effect 3 Parameter on FX 2	Adjust Opacity for Text Effect
	E12-1	FX 2 BEATS	Turn	Adjust Effect Time for FX 2	Select Fader Transition Type
	E13-1	FX 2 EFFECT PARAMETER 1	Press	Effect 1 on FX 2 On/Off	Select Effect Type for Effect 1 of FX 2
	E14-1	FX 2 EFFECT PARAMETER 2	Press	Effect 2 on FX 2 On/Off	Select Effect Type for Effect 2 of FX 2
	E15-1	FX 2 EFFECT PARAMETER 3	Press	Effect 3 on FX 2 On/Off	Select Effect Type for Effect 3 of FX 2
	E16-1	FX 2 TAP	Press	Switch the Tap Tempo for FX 2 to Manual Tempo Mode / Set BPM for FX 2 by tapping the button	Select Single FX Mode/Multi FX Mode for FX 2
	E17-1	FX 1 EFFECT PARAMETER 1	Long press	Switch the Tap Tempo for FX 1 to Auto Tempo Mode	Switch Fader Transition Type
	E18-1	FX 1 EFFECT PARAMETER 2	Turn	Adjust Effect Parameter 2 for FX 1	Adjust Video Effect 2 Parameter for left channel
	E19-1	FX 1 EFFECT PARAMETER 3	Turn	Adjust Effect Parameter 3 for FX 1	Adjust Video Effect 3 Parameter for left channel
	E20-1	FX 1 BEATS	Turn	Adjust Effect Time for FX 1	Adjust Opacity for Image Effect
	E21-1	FX 1 EFFECT PARAMETER 1	Press	FX 1 On/Off	Select Effect Type for FX 1
	E22-1	FX 1 EFFECT PARAMETER 2	Press	Select Effect Parameter 4 for FX 1	Select Effect Type for FX 1
	E23-1	FX 1 EFFECT PARAMETER 3	Press	Select Effect Parameter 5 for FX 1	Select Effect Type for FX 1
	E24-1	FX 1 TAP	Press	Switch the Tap Tempo for FX 1 to Manual Tempo Mode / Set BPM for FX 1 by tapping the button	Select Single FX Mode/Multi FX Mode for FX 1
E25-1	FX 2 EFFECT PARAMETER 1	Long press	Switch the Tap Tempo for FX 2 to Auto Tempo Mode	Switch Fader Transition Type	
E26-1	FX 2 EFFECT PARAMETER 1	Turn	Adjust Effect Parameter 1 for FX 2	Adjust Video Effect 1 Parameter for right channel	
E27-1	FX 2 EFFECT PARAMETER 2	Turn	Adjust Effect Parameter 2 for FX 2	Adjust Video Effect 2 Parameter for right channel	
E28-1	FX 2 EFFECT PARAMETER 3	Turn	Adjust Effect Parameter 3 for FX 2	Adjust Opacity for Text Effect	
E29-1	FX 2 BEATS	Turn	Adjust Effect Time for FX 2	Select Fader Transition Type	
E30-1	FX 2 EFFECT PARAMETER 1	Press	FX 2 On/Off	Select Effect Type for Effect 1 of FX 2	
E31-1	FX 2 EFFECT PARAMETER 2	Press	Select Effect Parameter 4 for FX 2	Select Effect Type for Effect 2 of FX 2	
E32-1	FX 2 EFFECT PARAMETER 3	Press	Select Effect Parameter 5 for FX 2	Select Effect Type for Effect 3 of FX 2	
E33-1	FX 2 TAP	Press	Switch the Tap Tempo for FX 2 to Manual Tempo Mode / Set BPM for FX 2 by tapping the button	Select Single FX Mode/Multi FX Mode for FX 2	
E34-1	FX 1 ASSIGN 1	Press	Assign FX 1 to Deck 1	Assign FX 1 to Deck 1	
E35-1	FX 1 ASSIGN 2	Press	Assign FX 1 to Deck 2	Assign FX 1 to Deck 2	
E36-1	FX 2 ASSIGN 1	Press	Assign FX 2 to Deck 1	Assign FX 2 to Deck 1	
E37-1	FX 2 ASSIGN 2	Press	Assign FX 2 to Deck 2	Assign FX 2 to Deck 2	
Performance Pad	P1	PAD 1	Press	Set/Play Hot Cue Point 1	Set/Play Hot Cue Point 1
	P2	PAD 2	Press	Set/Play Hot Cue Point 2	Set/Play Hot Cue Point 2
	P3	PAD 3	Press	Set/Play Hot Cue Point 3	Set/Play Hot Cue Point 3
	P4	PAD 4	Press	Set/Play Hot Cue Point 4	Set/Play Hot Cue Point 4
	P5	PAD 5	Press	Set/Play Hot Cue Point 5	Set/Play Hot Cue Point 5
	P6	PAD 6	Press	Set/Play Hot Cue Point 6	Set/Play Hot Cue Point 6
	P7	PAD 7	Press	Set/Play Hot Cue Point 7	Set/Play Hot Cue Point 7
	P8	PAD 8	Press	Set/Play Hot Cue Point 8	Set/Play Hot Cue Point 8
	P9	PAD 1	Press	Play a loop using shortest loop length while Pad 1 is pressed	Play a loop using shortest loop length while Pad 1 is pressed
	P10	PAD 2	Press	Play a loop using 2nd shortest loop length while Pad 2 is pressed	Play a loop using 2nd shortest loop length while Pad 2 is pressed
	P11	PAD 3	Press	Play a loop using 3rd shortest loop length while Pad 3 is pressed	Play a loop using 3rd shortest loop length while Pad 3 is pressed
	P12	PAD 4	Press	Play a loop using 4th shortest loop length while Pad 4 is pressed	Play a loop using 4th shortest loop length while Pad 4 is pressed
	P13	PAD 5	Press	Play a loop using 5th shortest loop length while Pad 5 is pressed	Play a loop using 5th shortest loop length while Pad 5 is pressed
	P14	PAD 6	Press	Play a loop using 6th shortest loop length while Pad 6 is pressed	Play a loop using 6th shortest loop length while Pad 6 is pressed
	P15	PAD 7	Press	Play a loop using 7th shortest loop length while Pad 7 is pressed	Play a loop using 7th shortest loop length while Pad 7 is pressed
	P16	PAD 8	Press	Play a loop using longest loop length while Pad 8 is pressed	Play a loop using longest loop length while Pad 8 is pressed
	P17	PAD 1	Press	Play the sliced section 1 while Pad 1 is pressed	Play the sliced section 1 while Pad 1 is pressed
	P18	PAD 2	Press	Play the sliced section 2 while Pad 2 is pressed	Play the sliced section 2 while Pad 2 is pressed
	P19	PAD 3	Press	Play the sliced section 3 while Pad 3 is pressed	Play the sliced section 3 while Pad 3 is pressed
	P20	PAD 4	Press	Play the sliced section 4 while Pad 4 is pressed	Play the sliced section 4 while Pad 4 is pressed
	P21	PAD 5	Press	Play the sliced section 5 while Pad 5 is pressed	Play the sliced section 5 while Pad 5 is pressed
	P22	PAD 6	Press	Play the sliced section 6 while Pad 6 is pressed	Play the sliced section 6 while Pad 6 is pressed
	P23	PAD 7	Press	Play the sliced section 7 while Pad 7 is pressed	Play the sliced section 7 while Pad 7 is pressed
	P24	PAD 8	Press	Play the sliced section 8 while Pad 8 is pressed	Play the sliced section 8 while Pad 8 is pressed

Group	No.	Name	SeraTo/Video Control Mode: OFF		SeraTo/Video Control Mode: ON			
			Operation	Function	Function	(+SHIFT)		
Performance Pad	P1	PAD 1	SAMPLER MODE	Press	Play Sample Slot 1	Stop playback of Sample Slot 1	Play Sample Slot 1	Stop playback of Sample Slot 1
	P2	PAD 2		Press	Play Sample Slot 2	Stop playback of Sample Slot 2	Play Sample Slot 2	Stop playback of Sample Slot 2
	P3	PAD 3		Press	Play Sample Slot 3	Stop playback of Sample Slot 3	Play Sample Slot 3	Stop playback of Sample Slot 3
	P4	PAD 4		Press	Play Sample Slot 4	Stop playback of Sample Slot 4	Play Sample Slot 4	Stop playback of Sample Slot 4
	P5	PAD 5		Press	Play Sample Slot 5	Stop playback of Sample Slot 5	Play Sample Slot 5	Stop playback of Sample Slot 5
	P6	PAD 6		Press	Play Sample Slot 6	Stop playback of Sample Slot 6	Play Sample Slot 6	Stop playback of Sample Slot 6
	P7	PAD 7		Press	-	-	-	-
	P8	PAD 8		Press	-	-	-	-
	P1	PAD 1	HOT LOOP MODE	Press	Play a loop after loop-start point is saved to Hot Cue Slot 1. If Hot Cue Point 1 has been set already, play a loop from Hot Cue Point 1.	Play a loop after moving to Hot Cue Point 1	Play a loop after loop-start point is saved to Hot Cue Slot 1. If Hot Cue Point 1 has been set already, play a loop from Hot Cue Point 1.	Play a loop after moving to Hot Cue Point 1
	P2	PAD 2		Press	Play a loop after loop-start point is saved to Hot Cue Slot 2. If Hot Cue Point 2 has been set already, play a loop from Hot Cue Point 2.	Play a loop after moving to Hot Cue Point 2	Play a loop after loop-start point is saved to Hot Cue Slot 2. If Hot Cue Point 2 has been set already, play a loop from Hot Cue Point 2.	Play a loop after moving to Hot Cue Point 2
	P3	PAD 3		Press	Play a loop after loop-start point is saved to Hot Cue Slot 3. If Hot Cue Point 3 has been set already, play a loop from Hot Cue Point 3.	Play a loop after moving to Hot Cue Point 3	Play a loop after loop-start point is saved to Hot Cue Slot 3. If Hot Cue Point 3 has been set already, play a loop from Hot Cue Point 3.	Play a loop after moving to Hot Cue Point 3
	P4	PAD 4		Press	Play a loop after loop-start point is saved to Hot Cue Slot 4. If Hot Cue Point 4 has been set already, play a loop from Hot Cue Point 4.	Play a loop after moving to Hot Cue Point 4	Play a loop after loop-start point is saved to Hot Cue Slot 4. If Hot Cue Point 4 has been set already, play a loop from Hot Cue Point 4.	Play a loop after moving to Hot Cue Point 4
	P5	PAD 5		Press	Play a loop after loop-start point is saved to Hot Cue Slot 5. If Hot Cue Point 5 has been set already, play a loop from Hot Cue Point 5.	Play a loop after moving to Hot Cue Point 5	Play a loop after loop-start point is saved to Hot Cue Slot 5. If Hot Cue Point 5 has been set already, play a loop from Hot Cue Point 5.	Play a loop after moving to Hot Cue Point 5
	P6	PAD 6		Press	Play a loop after loop-start point is saved to Hot Cue Slot 6. If Hot Cue Point 6 has been set already, play a loop from Hot Cue Point 6.	Play a loop after moving to Hot Cue Point 6	Play a loop after loop-start point is saved to Hot Cue Slot 6. If Hot Cue Point 6 has been set already, play a loop from Hot Cue Point 6.	Play a loop after moving to Hot Cue Point 6
	P7	PAD 7		Press	Play a loop after loop-start point is saved to Hot Cue Slot 7. If Hot Cue Point 7 has been set already, play a loop from Hot Cue Point 7.	Play a loop after moving to Hot Cue Point 7	Play a loop after loop-start point is saved to Hot Cue Slot 7. If Hot Cue Point 7 has been set already, play a loop from Hot Cue Point 7.	Play a loop after moving to Hot Cue Point 7
	P8	PAD 8		Press	Play a loop after loop-start point is saved to Hot Cue Slot 8. If Hot Cue Point 8 has been set already, play a loop from Hot Cue Point 8.	Play a loop after moving to Hot Cue Point 8	Play a loop after loop-start point is saved to Hot Cue Slot 8. If Hot Cue Point 8 has been set already, play a loop from Hot Cue Point 8.	Play a loop after moving to Hot Cue Point 8
P1	PAD 1	AUTO LOOP MODE	Press	Play a loop using shortest loop length.	-	Play a loop using shortest loop length.	-	
P2	PAD 2		Press	Play a loop using 2nd shortest loop length.	-	Play a loop using 2nd shortest loop length.	-	
P3	PAD 3		Press	Play a loop using 3rd shortest loop length.	-	Play a loop using 3rd shortest loop length.	-	
P4	PAD 4		Press	Play a loop using 4th shortest loop length.	-	Play a loop using 4th shortest loop length.	-	
P5	PAD 5		Press	Play a loop using 5th shortest loop length.	-	Play a loop using 5th shortest loop length.	-	
P6	PAD 6		Press	Play a loop using 6th shortest loop length.	-	Play a loop using 6th shortest loop length.	-	
P7	PAD 7		Press	Play a loop using 7th shortest loop length.	-	Play a loop using 7th shortest loop length.	-	
P8	PAD 8		Press	Play a loop using longest loop length.	-	Play a loop using longest loop length.	-	
P1	PAD 1	MANUAL LOOP MODE	Press	-	-	-	-	
P2	PAD 2		Press	Loop Active	-	Loop Active	-	
P3	PAD 3		Press	Save a loop to a Loop Slot	-	Save a loop to a Loop Slot	-	
P4	PAD 4		Press	Select Loop Slot	-	Select Loop Slot	-	
P5	PAD 5		Press	Set a loop-in point/Adjust loop-in point	-	Set a loop-in point/Adjust loop-in point	-	
P6	PAD 6		Press	Set a loop-out point/Adjust loop-out point	-	Set a loop-out point/Adjust loop-out point	-	
P7	PAD 7		Press	Call a loop/Cancel loop playback	-	Call a loop/Cancel loop playback	-	
P8	PAD 8		Press	Select Loop Slot	-	Select Loop Slot	-	
P1	PAD 1	VELOCITY MODE	Press	Play Sample Slot 1 and adjust Volume for Sample Slot 1	Stop playback of Sample Slot 1	Play Sample Slot 1 and adjust Volume for Sample Slot 1	Stop playback of Sample Slot 1	
P2	PAD 2		Press	Play Sample Slot 2 and adjust Volume for Sample Slot 2	Stop playback of Sample Slot 2	Play Sample Slot 2 and adjust Volume for Sample Slot 2	Stop playback of Sample Slot 2	
P3	PAD 3		Press	Play Sample Slot 3 and adjust Volume for Sample Slot 3	Stop playback of Sample Slot 3	Play Sample Slot 3 and adjust Volume for Sample Slot 3	Stop playback of Sample Slot 3	
P4	PAD 4		Press	Play Sample Slot 4 and adjust Volume for Sample Slot 4	Stop playback of Sample Slot 4	Play Sample Slot 4 and adjust Volume for Sample Slot 4	Stop playback of Sample Slot 4	
P5	PAD 5		Press	Play Sample Slot 5 and adjust Volume for Sample Slot 5	Stop playback of Sample Slot 5	Play Sample Slot 5 and adjust Volume for Sample Slot 5	Stop playback of Sample Slot 5	
P6	PAD 6		Press	Play Sample Slot 6 and adjust Volume for Sample Slot 6	Stop playback of Sample Slot 6	Play Sample Slot 6 and adjust Volume for Sample Slot 6	Stop playback of Sample Slot 6	
P7	PAD 7		Press	-	-	-	-	
P8	PAD 8		Press	-	-	-	-	
P1	PAD 1	SAVED FLIP MODE	Press	Flip Slot1 Save/Play	Flip Slot1 On/Off	Flip Slot1 Save/Play	Flip Slot1 On/Off	
P2	PAD 2		Press	Flip Slot2 Save/Play	Flip Slot2 On/Off	Flip Slot2 Save/Play	Flip Slot2 On/Off	
P3	PAD 3		Press	Flip Slot3 Save/Play	Flip Slot3 On/Off	Flip Slot3 Save/Play	Flip Slot3 On/Off	
P4	PAD 4		Press	Flip Slot4 Save/Play	Flip Slot4 On/Off	Flip Slot4 Save/Play	Flip Slot4 On/Off	
P5	PAD 5		Press	Flip Slot5 Save/Play	Flip Slot5 On/Off	Flip Slot5 Save/Play	Flip Slot5 On/Off	
P6	PAD 6		Press	Flip Slot6 Save/Play	Flip Slot6 On/Off	Flip Slot6 Save/Play	Flip Slot6 On/Off	
P7	PAD 7		Press	-	-	-	-	
P8	PAD 8		Press	-	-	-	-	
P1	PAD 1	PITCH PLAY MODE	Press	Set/Select Hot Cue Point 1	-	Set/Select Hot Cue Point 1	-	
P2	PAD 2		Press	Set/Select Hot Cue Point 2	-	Set/Select Hot Cue Point 2	-	
P3	PAD 3		Press	Set/Select Hot Cue Point 3	-	Set/Select Hot Cue Point 3	-	
P4	PAD 4		Press	Set/Select Hot Cue Point 4	-	Set/Select Hot Cue Point 4	-	
P5	PAD 5		Press	Set/Select Hot Cue Point 5	-	Set/Select Hot Cue Point 5	-	
P6	PAD 6		Press	Set/Select Hot Cue Point 6	-	Set/Select Hot Cue Point 6	-	
P7	PAD 7		Press	Set/Select Hot Cue Point 7	-	Set/Select Hot Cue Point 7	-	
P8	PAD 8		Press	Set/Select Hot Cue Point 8	-	Set/Select Hot Cue Point 8	-	
P9	HOT CUE	Press	Switch to HOT CUE Mode / SAVED FLIP Mode	Switch to HOT LOOP Mode / SAVED FLIP Mode	Switch to HOT CUE Mode / SAVED FLIP Mode	Switch to HOT LOOP Mode / SAVED FLIP Mode	Switch to HOT LOOP Mode / SAVED FLIP Mode	
P10	ROLL	Press	Switch to AUTO LOOP Mode	Switch to AUTO LOOP Mode	Switch to ROLL Mode	Switch to AUTO LOOP Mode		
P11	SLICER	Press	Switch to SLICER Mode 1/Mode 2	Switch to MANUAL LOOP Mode	Switch to SLICER Mode 1/Mode 2	Switch to MANUAL LOOP Mode		
P12	SAMPLER	Press	Switch to SAMPLER Mode/PITCH PLAY Mode	Switch to VELOCITY Mode	Switch to SAMPLER Mode/PITCH PLAY Mode	Switch to VELOCITY Mode		
P13	PARAMETER [ < ]	HOT CUE MODE	Long press	Switch to VELOCITY Mode/SAMPLER Mode	Switch to VELOCITY Mode/SAMPLER Mode	Switch to VELOCITY Mode/SAMPLER Mode	Switch to VELOCITY Mode/SAMPLER Mode	
			SAVED FLIP	Press	Flip Record On/Off <sup>*9</sup>	Flip Loop On/Off	Flip Record On/Off <sup>*9</sup>	Flip Loop On/Off
		ROLL MODE	Press	Switch range of selectable loop length settings	-	Switch range of selectable loop length settings	-	
		SLICER MODE	Press	Select the loop length for SLICER(Quantization)	Select the size of when a track is sliced(Domain)	Select the loop length for SLICER(Quantization)	Select the size of when a track is sliced(Domain)	
		SAMPLER MODE	Press	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	
		HOT LOOP MODE	Press	Reduce a loop length to half	Move a loop backward(Loop Shift)	Reduce a loop length to half	Move a loop backward(Loop Shift)	
		AUTO LOOP MODE	Press	Switch range of selectable loop length settings	Move a loop backward(loop Shift)	Switch range of selectable loop length settings	Move a loop backward(loop Shift)	
		MANUAL LOOP MODE	Press	Reduce a loop length to half	Move a loop backward(Loop Shift)	Reduce a loop length to half	Move a loop backward(Loop Shift)	
		VELOCITY MODE	Press	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	
		PITCH PLAY MODE	Press	Key range select	Shift down key	Key range select	Shift down key	
P14	PARAMETER [ > ]	HOT CUE MODE	Press	Flip Play	Flip On/Off	Flip Play	Flip On/Off	
			SAVED FLIP	Press	-	-	-	-
		ROLL MODE	Press	Switch range of selectable loop length settings	-	Switch range of selectable loop length settings	-	
		SLICER MODE	Press	Select the loop length for SLICER(Quantization)	Select the size of when a track is sliced(Domain)	Select the loop length for SLICER(Quantization)	Select the size of when a track is sliced(Domain)	
		SAMPLER MODE	Press	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	
		HOT LOOP MODE	Press	Reduce a loop length to half	Move a loop backward(Loop Shift)	Reduce a loop length to half	Move a loop backward(Loop Shift)	
		AUTO LOOP MODE	Press	Switch range of selectable loop length settings	Move a loop forward(Loop Shift)	Switch range of selectable loop length settings	Move a loop forward(Loop Shift)	
		MANUAL LOOP MODE	Press	Expand a loop length to double	Move a loop forward(loop Shift)	Expand a loop length to double	Move a loop forward(loop Shift)	
		VELOCITY MODE	Press	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	Switch the bank for Sample Slots	
		PITCH PLAY MODE	Press	Key range select	Shift up key	Key range select	Shift up key	

Additional Information

- \*1 This controller can not control both SeraTo/Video and DJ-FX at a time.
- \*2 During loop roll playback, normal playback with the original rhythm continues in the background. When loop roll playback is canceled, playback resumes from the position reached in the background at the point loop roll playback was canceled.
- \*3 Loop length setting for Auto Loop is applied.
- \*4 When Pad 3 is pressed, the loop created by Auto Loop function can be saved to an empty Loop Slot. The loop created by Manual Loop function is saved to selected Loop Slot automatically.
- \*5 To adjust loop-in point, turn the [AUTO LOOP] knob after pressing Pad 5 during loop playback.
- \*6 To adjust loop-out point, turn the [AUTO LOOP] knob after pressing Pad 6 during loop playback.
- \*7 Way to enter Velocity Mode can be set in this controller's Utilities Menu.
- \*8: Available only when SeraTo Flip is activated and enabled in the [SETUP] menu.  
If you do not restart SeraTo DJ Pro after activating SeraTo Flip for the first time, some buttons may not respond. Please make sure to restart SeraTo DJ Pro once you activate SeraTo Flip.
- \*9: When pressing the [HOT CUE] button during HOT CUE mode, SAVED FLIP is enabled.  
If you want to go back to HOT CUE mode, press the [HOT CUE] button again.  
As [HOT CUE] button is lit both in HOT CUE and SAVED FLIP mode, it is difficult to tell which mode is currently enabled. You need to be very careful not to mix up with both modes.
- \*10: Flip record will not begin right after Flip record is enabled.  
Only when HOT CUE or CENSOR playback starts after Flip record is enabled, Flip record will begin.
- \*11: When SeraTo Flip is activated and enabled in the [SETUP] menu, the [FLIP] panel can be selected.
- \*12: Available only when Pitch 'n Time DJ is activated and enabled in the [SETUP] menu.  
If you do not restart SeraTo DJ Pro after activating Pitch 'n Time DJ for the first time, some buttons may not respond.  
Please make sure to restart SeraTo DJ Pro once you activate Pitch 'n Time DJ.
- \*13: When pressing the [SAMPLER] button during SAMPLER mode, PITCH PLAY is enabled.  
If you want to go back to SAMPLER mode, press the [SAMPLER] button again.