Pioneer sound.vision.soul

DVJ-X1 Software Upgrade Ver. 3.00

Applicable Models: **DVJ-X1**

* System versions later than Ver. 3.00 do not require this update.
To confirm the system version of your unit, consult the section "**To confirm the DVJ-X1 system version**" in the "Program Update Procedures" described on the reverse side.
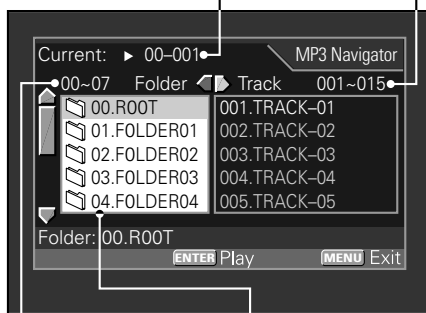
Update Contents

The contents of this program update are as follows:
For details regarding functions and operations, please consult the Operating Instructions (PDF file) located on the provided program update disc.
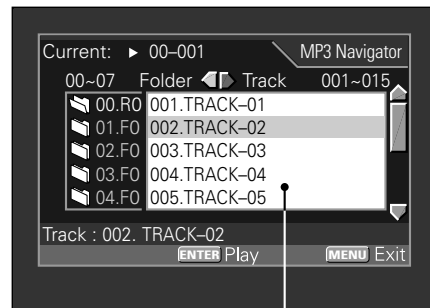
Added or Expanded Functions

■ **The ability to play CD-R/RW discs recorded in MP3 format has been added. Also, MP3 text information can be confirmed via the preview monitor display.**

Total tracks within selected folder
Number of currently playing folder/track

Current: ▶ 00–001	MP3 Navigator
00~07 Folder ◀▶ Track	001~015
00.ROOT	001.TRACK–01
01.FOLDER01	002.TRACK–02
02.FOLDER02	003.TRACK–03
03.FOLDER03	004.TRACK–04
04.FOLDER04	005.TRACK–05
Folder: 00.ROOT	
ENTER Play	MENU Exit

Current: ▶ 00–001	MP3 Navigator
00~07 Folder ◀▶ Track	001~015
00.RO	001.TRACK–01
01.FO	002.TRACK–02
02.FO	003.TRACK–03
03.FO	004.TRACK–04
04.FO	005.TRACK–05
Track : 002. TRACK–02	
ENTER Play	MENU Exit

Total number of folders
Displays folder number together with folder name, or "ROOT".
If folder name is recorded in a code other than English alphanumerics, a numbering series beginning with "**F_001**" will be displayed instead.
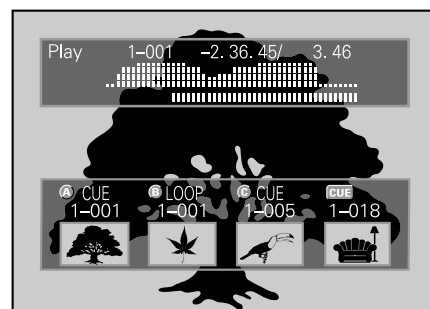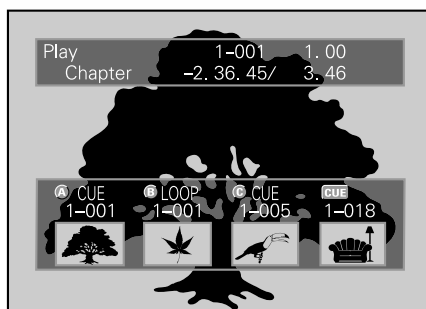
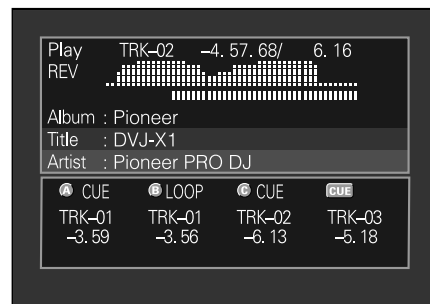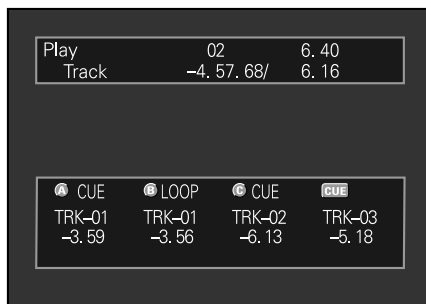**Track number and ID3 tag title**
If no alphanumeric ID3 tag is recorded, the file name will be displayed. If ID3 tag and file name are not recorded as English alphanumerics, a series number beginning with "**T_001**" will be displayed.

■ **One-track loop function has been added.** When the EMERGENCY LOOP button is held depressed for 1 second or more, the current chapter or track is played back as a loop.

■ In addition to CDs, **DJ operation with DVDs also now allows digital audio output.**

■ **Preview monitor image now adds the playing address and WAVE display.**

With DVDs

With CDs

Improved Ease of Operation

- **About hot cue A/B/C recall when disc is inserted;** in earlier versions, recall of B and C hot cue points could not be performed until the A hot cue point recall was completed, but it is now possible to recall hot cue points B or C even before completing A hot cue point recall; **in other words, continuous recall scheduling is now possible.**
- In earlier versions, when a disc was played to its end, the player simply stopped; this function has been improved so that the player now enters the pause (standby) mode at the end of disc playback. As a result, **it is now possible to transition quickly from disc end to hot cue or back cue operations.**
- **The cue point navigation menu display can now be turned off by pressing the DISPLAY button if desired,** not only by the previous CUE/CALL LOOP button.

Improvement of Restricted Items/Functional Improvements

- **Data for the WAVE display** was previously read simultaneous **with CD playback** (real time read), but **read-ahead capability has now been added.**

Program Update Procedures

1. **Confirm that unit power is OFF and no disc is loaded. In this condition, hold the REC MODE and RELOOP/EXIT buttons depressed simultaneously, and turn power ON.**
2. **Release your fingers from the REC MODE and RELOOP/EXIT buttons when the "NO-DISC" message appears in the display.**
3. **Insert the supplied program update disc.**
   - The display will show the "**DOWNLOAD-MAIN**" scrolling menu.
   - Do not turn power OFF while the update process is continuing.
   - The update process will be completed in about 3 minutes.
   - When the update is finished, the "**COMPLETE**" message will appear and the program update disc will be ejected.
4. **Remove the program update disc and turn power OFF.**

This completes the update procedure.

* To confirm the DVJ-X1 system version:

1. **Turn power ON.**
2. **Hold the MASTER TEMPO button depressed for 10 seconds.**
   - The system version will be displayed on the main unit's display panel and on the preview monitor connected to the PREVIEW output connector.
   - To return the DVJ-X1 to normal operation, turn the power OFF and then ON again.