

TORΔIZ

Groovebox

CHORDCAT

Firmware Update Guide

A. How to check the current Firmware Version of the Chordcat

1. Turn on the Chordcat.

2. The firmware version is displayed on the main unit display.



B. Download and unzip the update file

1. Unzip the downloaded file.

For Windows:

Save the downloaded file [Chordcat_vxxx_Win.zip] to a folder such as the desktop and unzip it.

For Mac OS:

Save the downloaded file [Chordcat_vxxx_Mac.zip] to a folder such as the desktop and unzip it.

The [Chordcat_vxxx_Mac.dmg] file is generated when the file is unzipped and then double-click it to mount.

2. Check the unzipped file.

For Windows:

The [Chordcat_vxxx_Win] folder is generated when the file is unzipped.

Please ensure the following files are included in the folder.

1. [ChordcatFirmwareUpdater.exe]
2. [Chordcat_vxxx.upd]

For Mac OS:

The [Chordcat_vxxx_Mac] folder is generated when the file is extracted.

Please ensure the following file is included in the folder.

1. [ChordcatUpdate_vxxx.app]

- ✓ **xxx is numerical characters of the new firmware version.**
- ✓ Depending on your computer settings, the extension such as .exe or .app may not be displayed.

C. Preparation for updating the Chordcat

1. Connect the Chordcat and a computer.


Connect the Chordcat to your computer using a USB cable.

2. Activate the update mode.

Press the power button while pressing the [Play] button and the [Rec] buttons.

After the power is on, keep pressing the [Play] button and the [Rec] button for about 3 seconds.

Once the Chordcat enters the update mode, "UPDATE" is displayed on the main unit display.

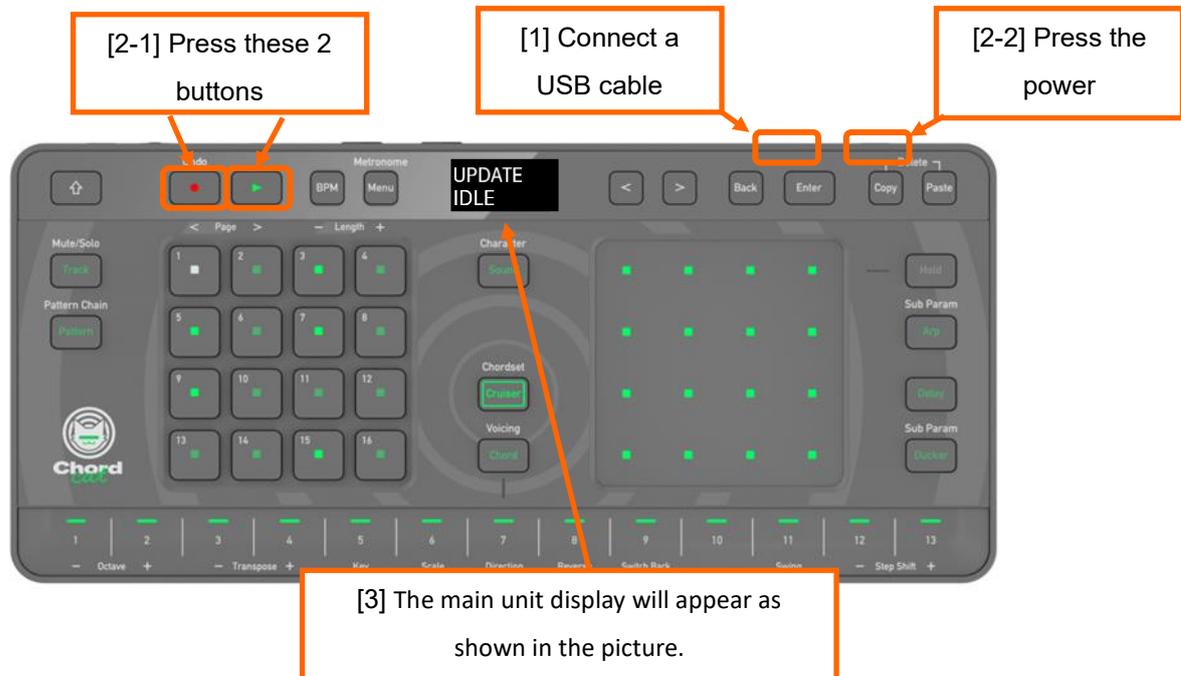

D. Updating the firmware using a computer

1. Updating procedures

Before updating, close all the applications running on the computer.

<STEP1> Start the update program.

For Windows:


Double-click [ChordcatFirmwareUpdater.exe] to activate the update file.

For Mac OS:

Double-click [ChordcatUpdate_vxxx.app] to activate the update file.

<STEP2> Select a language.

Select the language you want to use and click [OK].

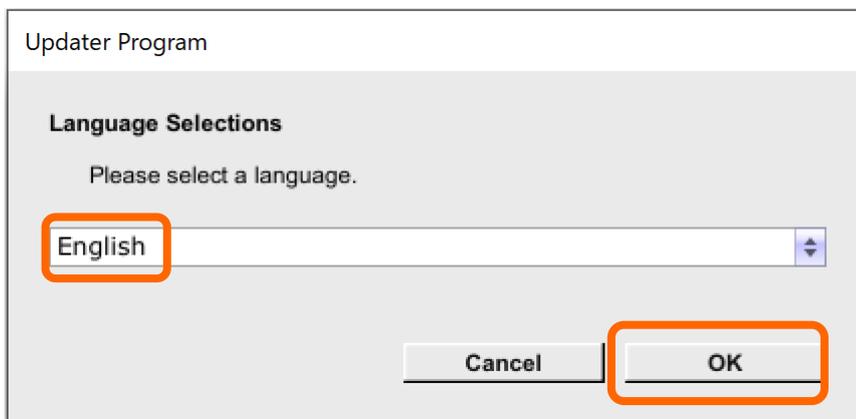


<STEP3> Check the firmware version before updating.

After ensuring that the firmware version is **x.xx**, click the [Start] button.


Ensure that the USB cable is securely connected to the Chordcat during the update.

Please make sure to use an AC adaptor to power your laptop during updating the firmware.

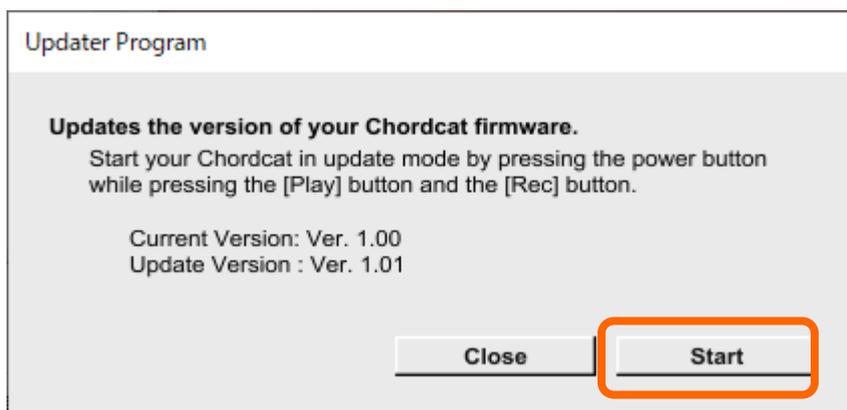

The updating process starts.


Please wait until the progress bar reaches the right end.

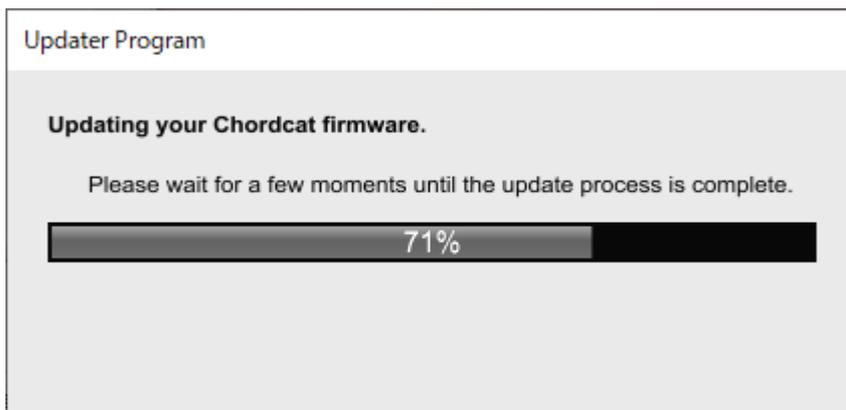

<STEP4> Complete the updating process.

When the firmware update process is complete and the message below appears, click the [OK] button.

When "Finished" is displayed on the Chordcat's display, the update is complete.

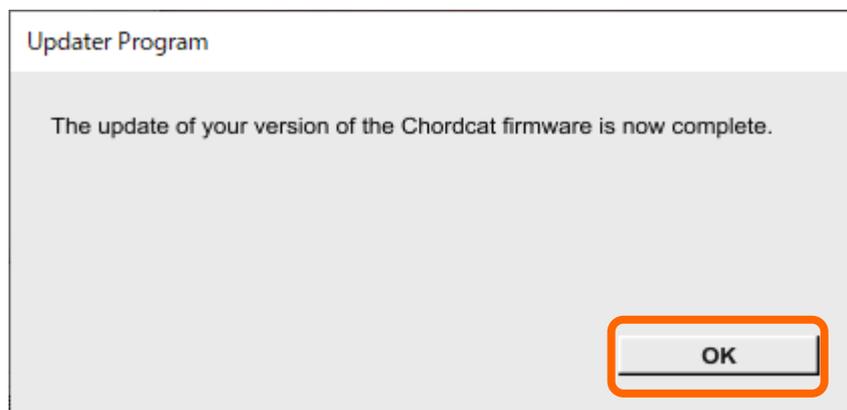

<STEP5> Reboot the Chordcat.

Turn off the power of the **Chordcat** and then turn it on again.


E. Check the firmware version

Check the firmware version of the Chordcat as described in [A. How to check the current Firmware Version of the Chordcat].

The firmware update is complete when you find the version you wanted in the main unit display.

How to cope with abnormal termination:

If you fail to update and the following message appears, turn off the power of the Chordcat and start from the beginning of the above Updating Procedures.

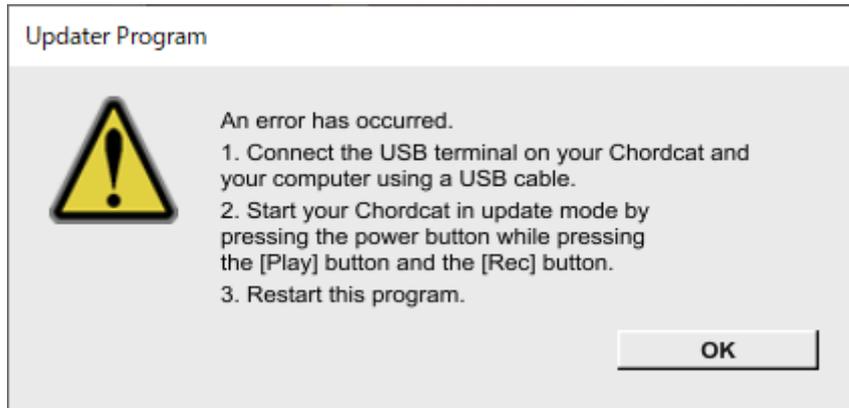

【Reference information】

This updater has been verified to operate on the operating systems below:

Windows : Windows 10/Windows 11

MacOS : macOS 13/14/15

The images shown in this Guide may not be the same as the current ones.